

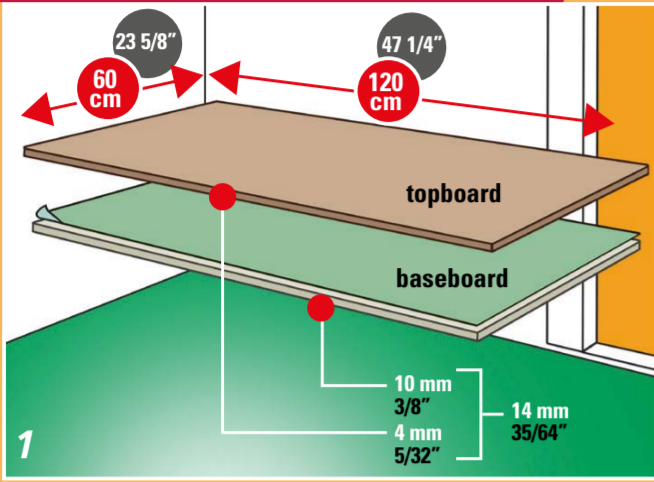
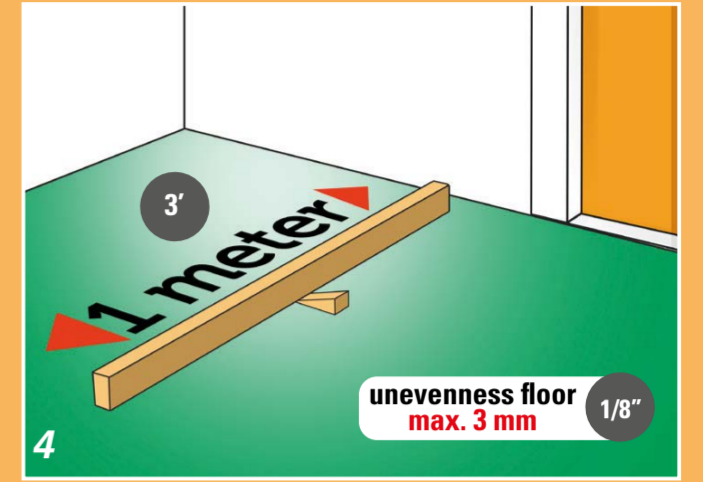


# FITTING INSTRUCTIONS


## FLOOR PREPARATION

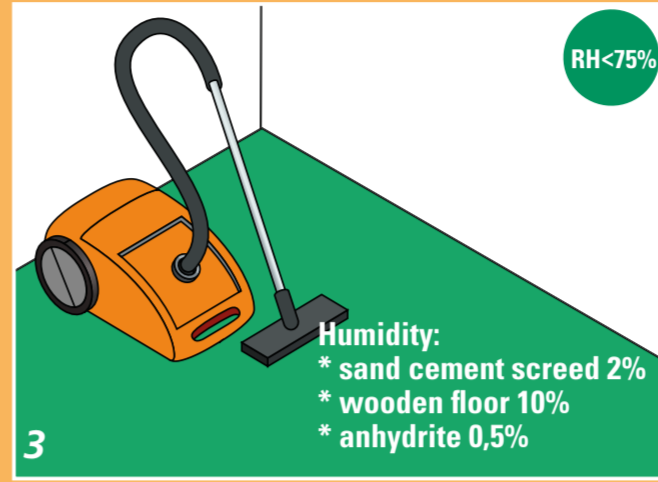


## ACCLIMATIZE 24 HOURS IN ADVANCE

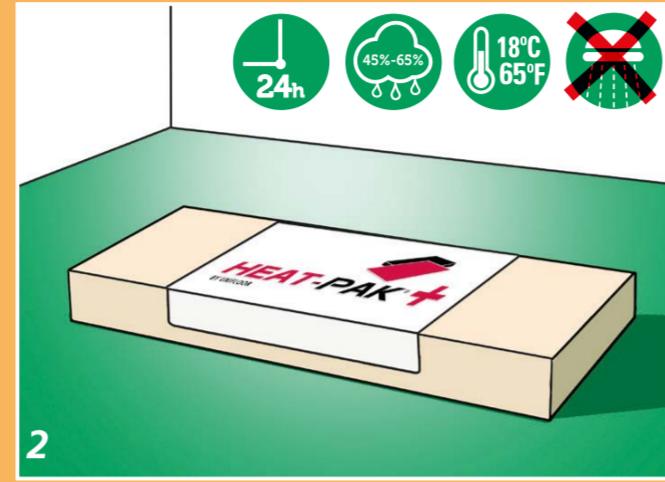


## ELECTRICAL FLOOR HEATING

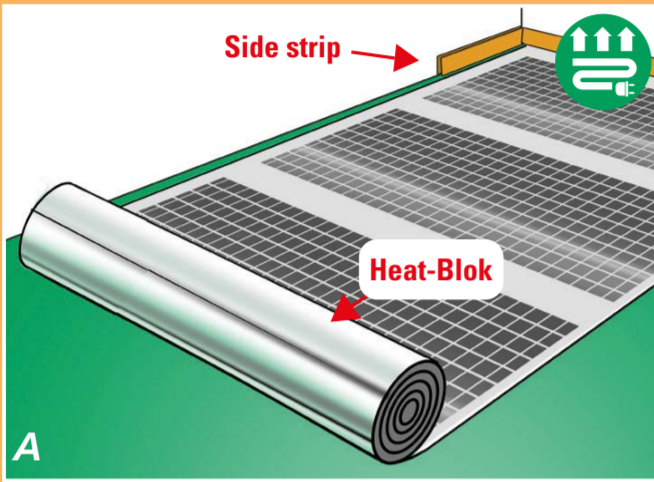



## ELECTRICAL FLOOR HEATING

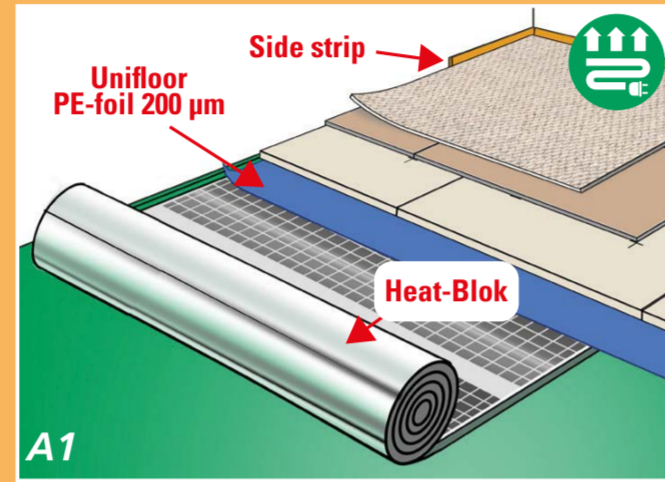













## WATER UNDERFLOOR HEATING

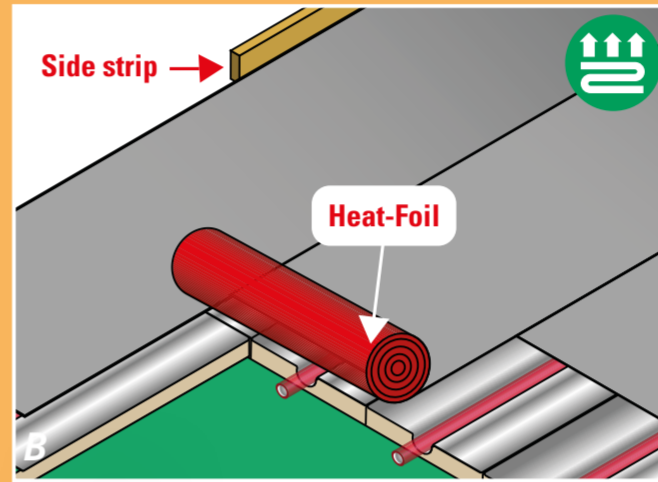



## WATER UNDERFLOOR HEATING

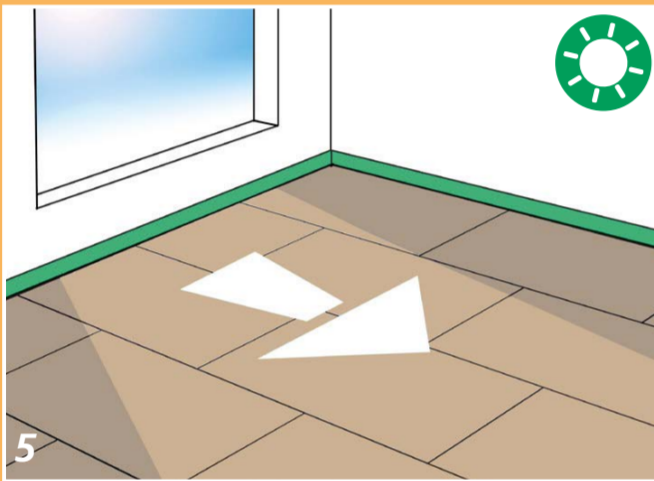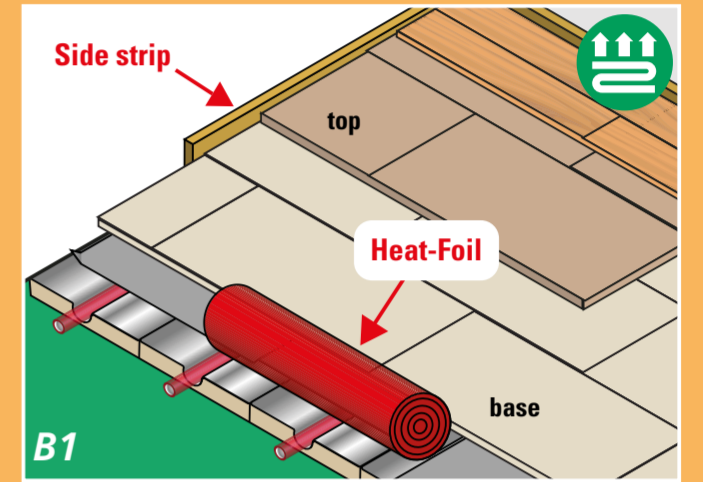

## FITTING INSTRUCTIONS

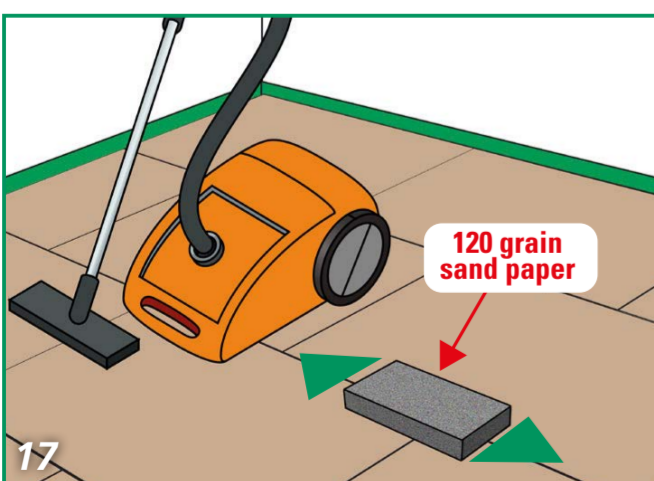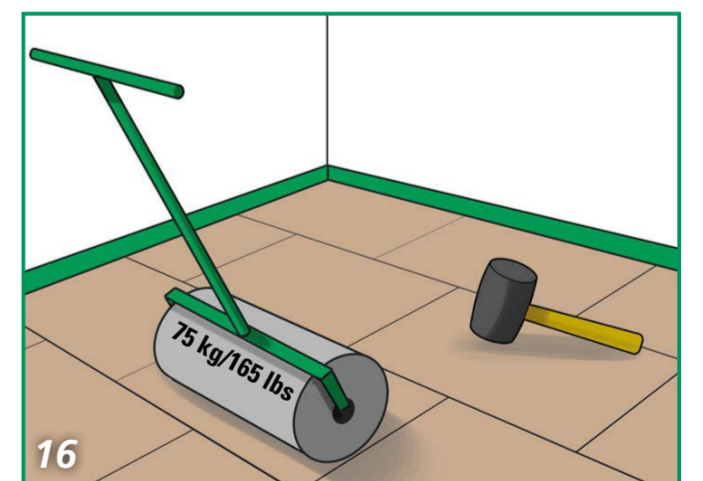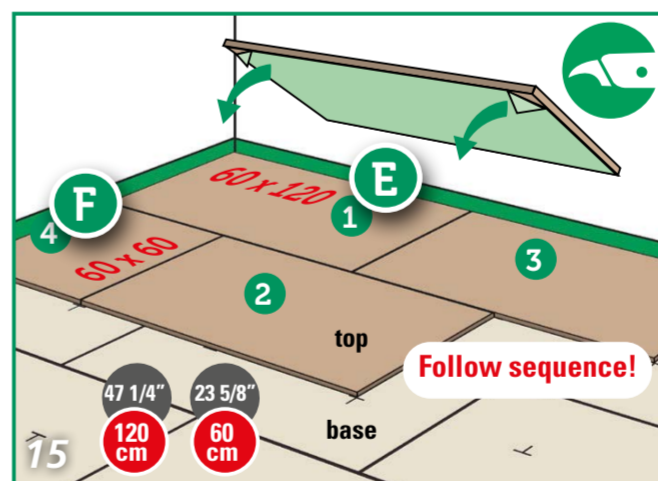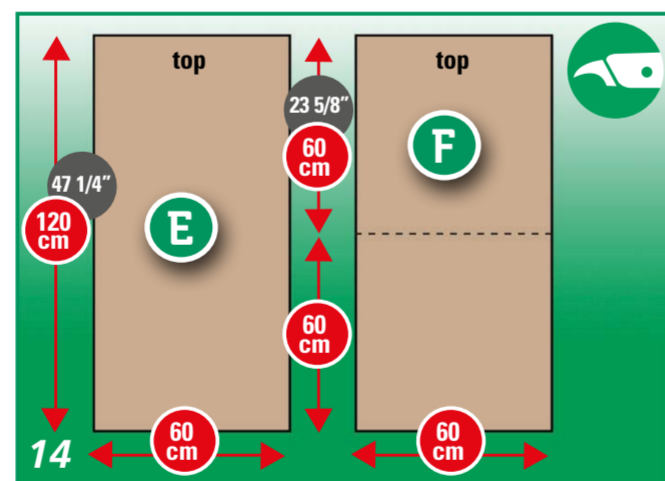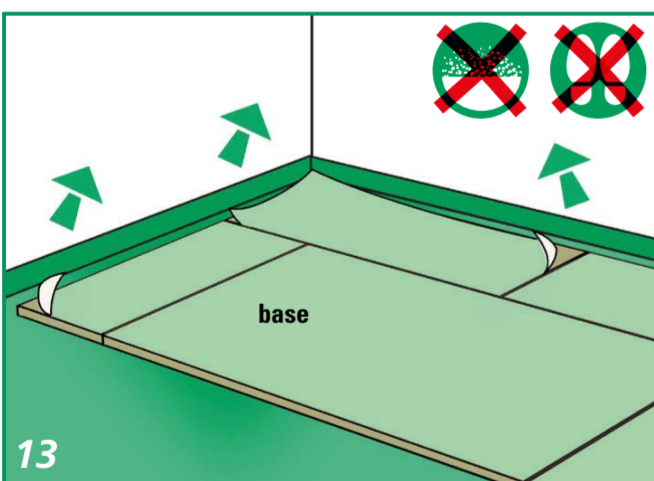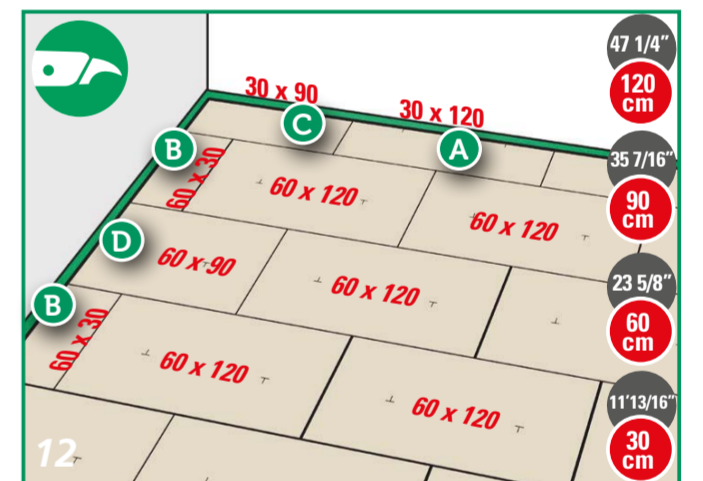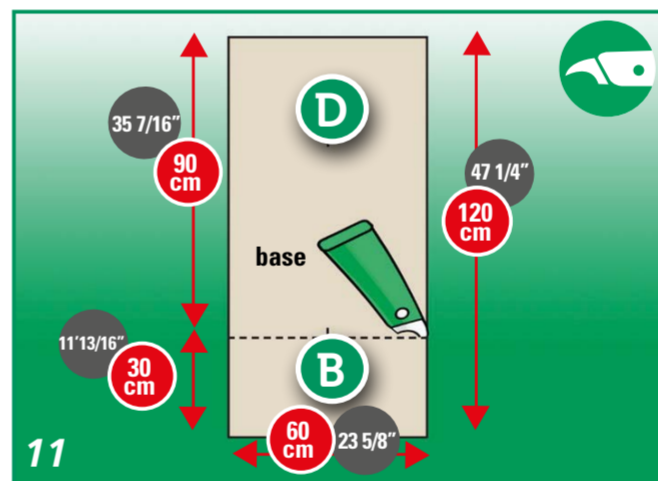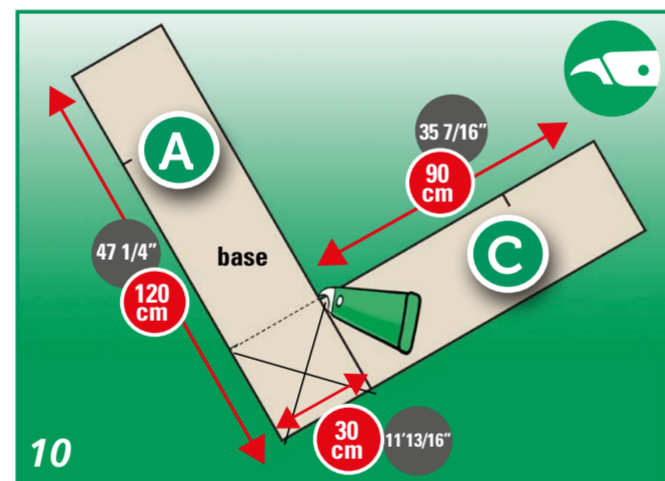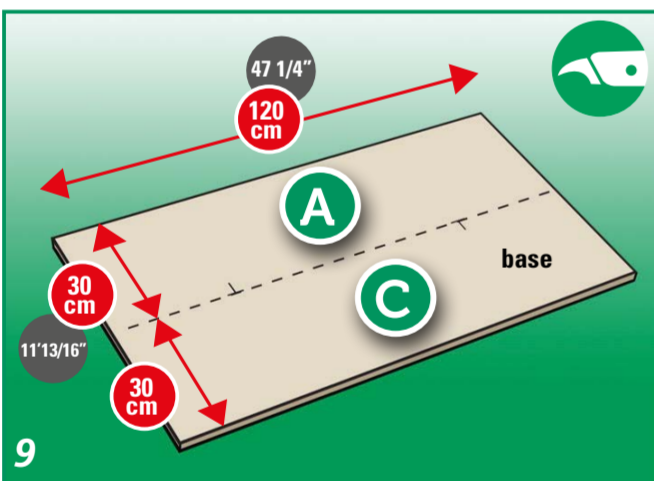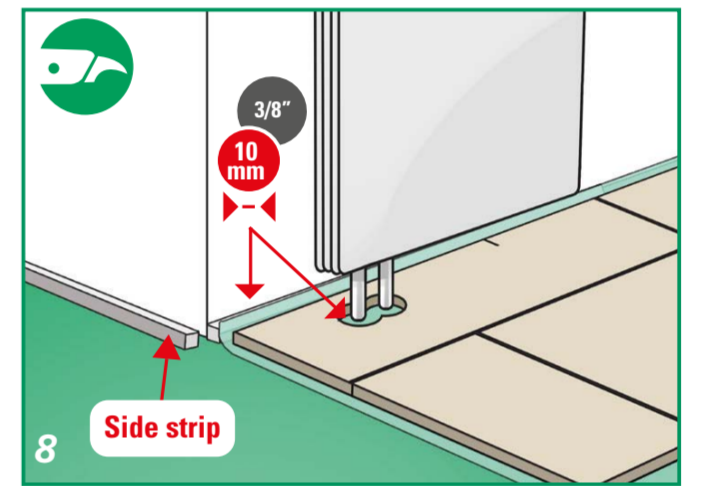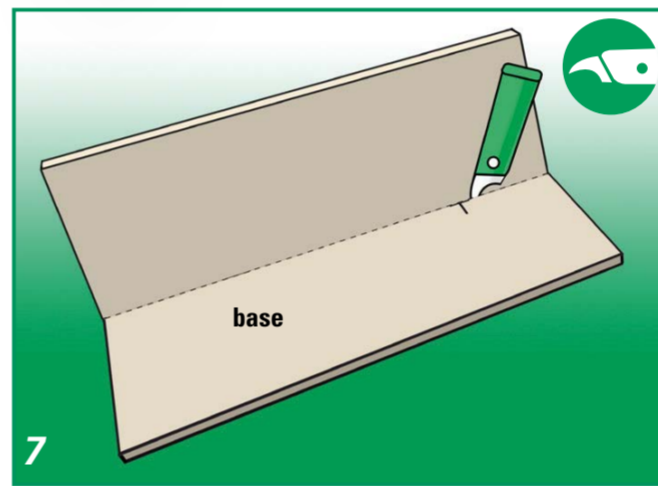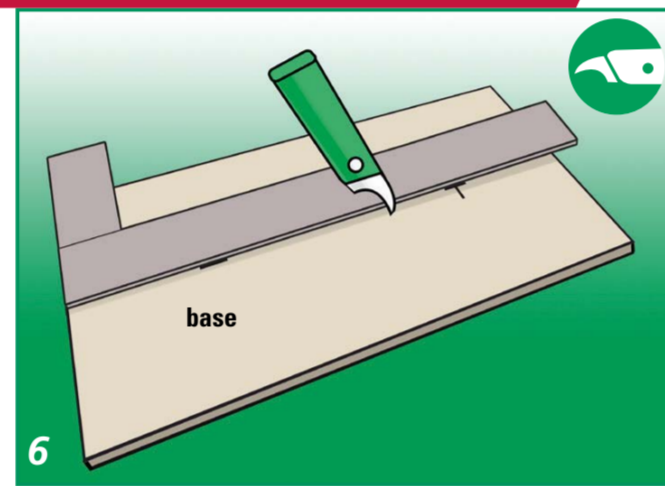

## FINISHING

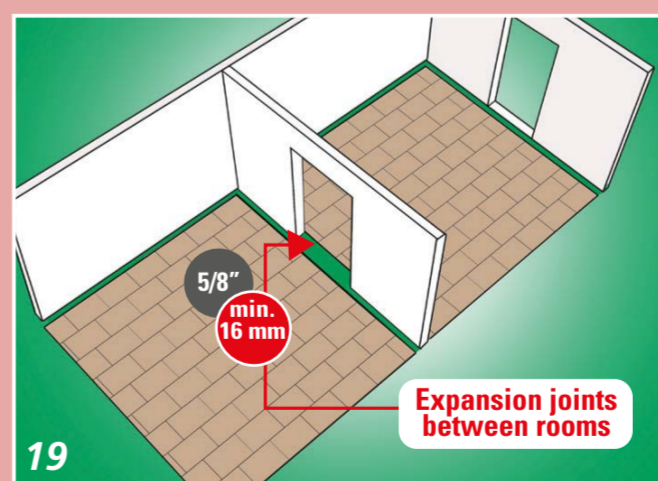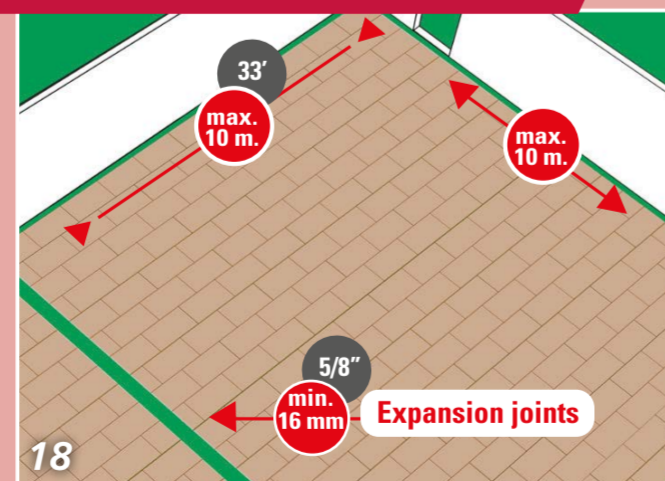

## PLACE FLOORCOVERING WITHIN 48 HOURS

